


Glove Box Panel, Can-Am® Maverick X3 Instructions

 hmfracing.com/equipment/can-am-maverick-x3/glove-box-panel-can-am-maverick-x3/installation

Installation



1. Remove side panels from the front of center console. *(both sides)*





2. Flip over and locate the corner circles on the backside of the plastic panels. (both sides)




3. Drill 3/8" hole (both sides)






4. Install factory side panel then slide the **HMF IQ Equipment Glove Box** side panel into place and install the rear **push pin**. *(Both sides)*

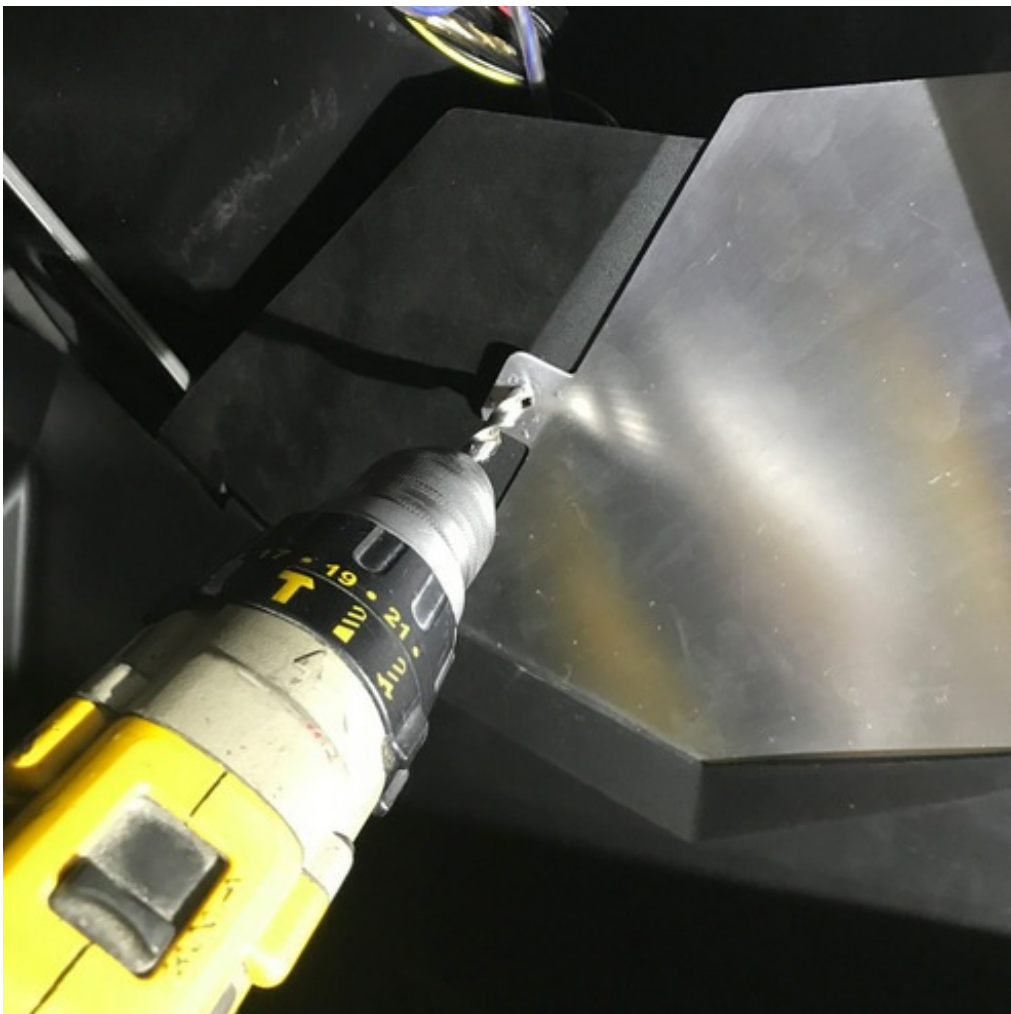

5. Making sure the new panel is sitting in the correct location drill second 3/8" hole through the plastic and install **punch pin**. *(Both sides)*

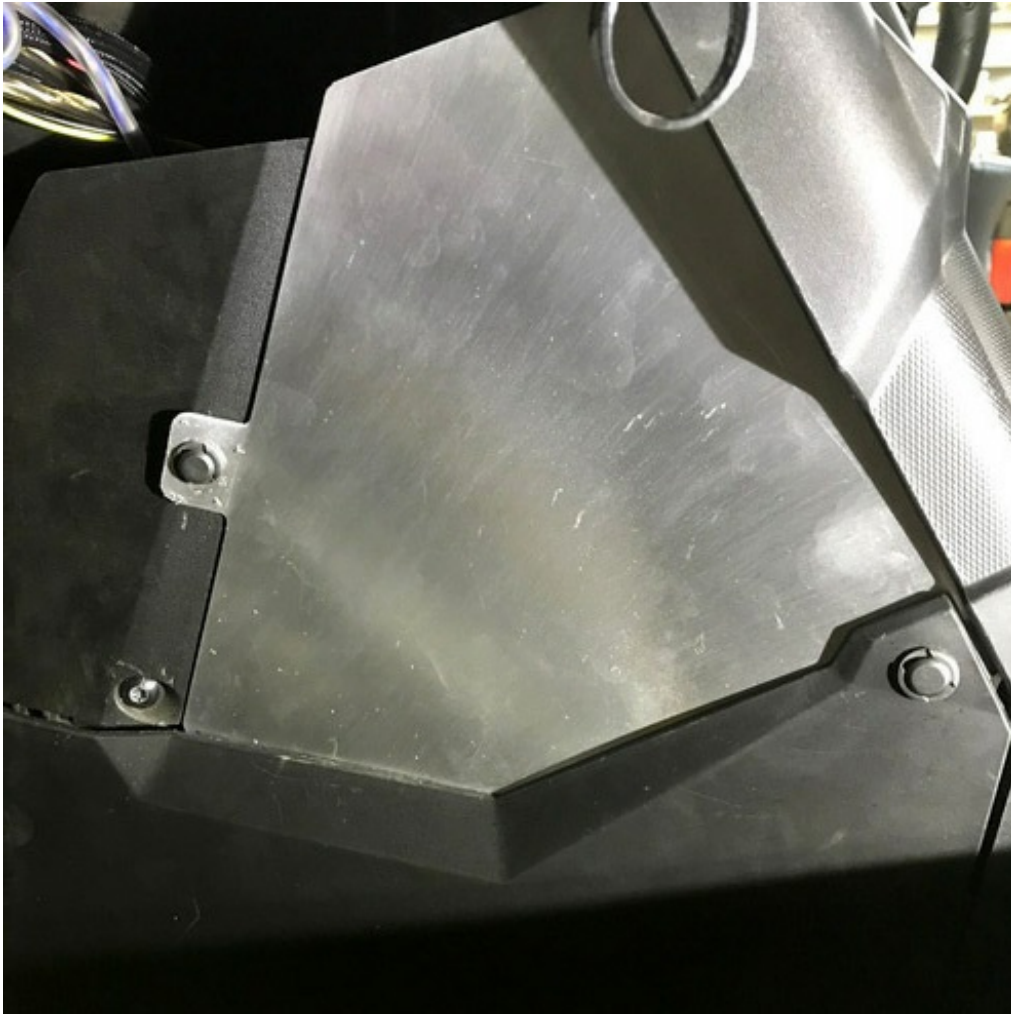

Discussion

Hardware



(4) Rivet - Plastic Push